


# Basic Heavy 3000

## Installation instruction

Page 1 of 3

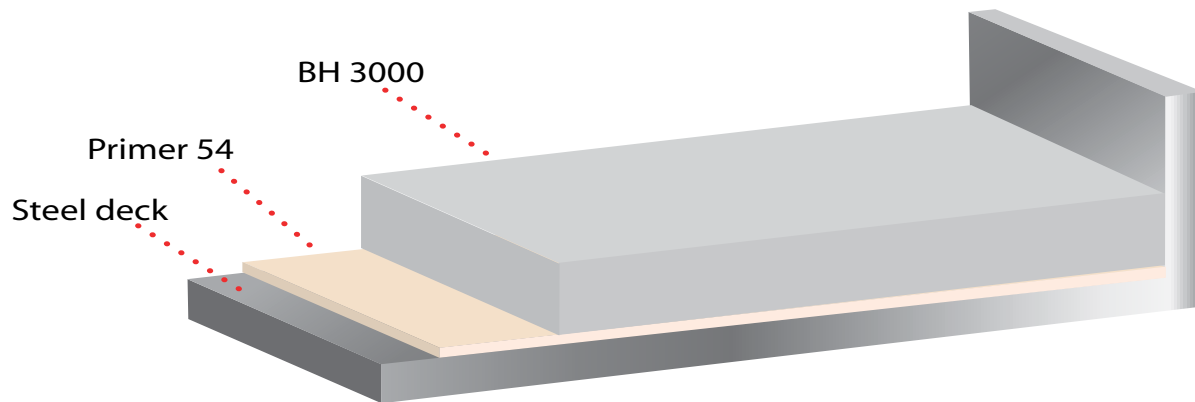

1. Ensure that the deck is clean and free from dust, grit, rust, grease or any other dirt. The deck surface should have been ground free from weld spots and other lumps and a normal shop primer applied
2. Spread out the primer in a smooth layer at the areas to be covered (1 liter should cover 10 m<sup>2</sup>)
3. Mix one bag of BH 3000 (25 kgs.) with approx. 4,5-5 liters of cold clean water and stir vigorously to a smooth easy flowing compound, after mixing the compound is ready for use
4. The BH 3000 compound is spread out in the required thickness, - please be aware about the minimum and maximum thickness. (min. 2 mm. and max. 30 mm.)
5. Then the installation of the compound is finished, the floor will be ready for walking after app. 3-4 hours at 20° C and after app. 18 - 24 hours at 20° C the floor will be ready to be covered with carpet, tiles, marble or PVC

# Basic Heavy 3000

## Installation instruction

Page 2 of 3



1. Spread out the DMS primer 54 smooth in a thin a layer at the floor  
Approx. 0,1 kg./ m<sup>2</sup>



2. The measured quantity of water (4,5-5 liter) is added the mixer after this add the BH 3000 compound. Stir vigorously to a smooth, easy-flowing mortar

# Basic Heavy 3000

## Installation instruction

Page 3 of 3



3. The BH 3000 is spread in the thickness that is wished or described, Please be aware about the min. (2 mm.) and the max. (30 mm.) thickness for the BH 3000 product



4. After app. 3-4 hours at 20°C. the floor is ready for walking and after 18-24 hours at 20°C and in a thickness of app. 8 mm. the floor is ready to be covered with carpet, PVC or tiling